

CT30EU PARTS LIST

Ref #	Part #	Description
1	806314	Glass Ceran Assy W/Keypad
2	801351	Screw, 6x3/8"
3	807070	Board, Control, 30"
4	803143	Cable, Ribbon, 15" & 30"
5	802613	Light, Indicator
6	801863	Element Assy., Double, 2200 Watt, 30", 36"
7	801865	Element Assy., Double, 1900 Watt, 30"
9	801860	Element Assy., Single, 1200 Watt, 30", 36"
10	801861	Element Assy., Single, 1500 Watt, 30", 36"
11	801866	Box, Burner, Inner, Insulation, 30"
12	806702	Box, Burner, Inner Assy., 30"
13	807071	Board, Relay, 30"
14	800414	Blower, Transverse
15	806700	Outer Burner Box Assy., 30"
16	802668	Guard, Fan
17	802669	Retainer, Fan, Rivet
18	800511	Spring, Leeco
19	806035	Power Board Mtg Bracket 30
20	806023	Cooktop Fan Mounting Bracket
21	800413	Power Conduit
22	806654	Moisture Barrier, CT30E

Not Shown

Part #	Description
806299	Unframed Cooktop Installation Pkg.
800419	Terminal Block
801046	Scraper, Cooktop
801048	Gasket, Rubber, Cooktop Surround
801101	Cleaning Cream
802671	Harness, Element, 30"
802709	Hold Down Clamp Kit
802733	Harness, Fan, 15", 30", 36"
802772	Grommet, Edge

CT30EU PARTS LIST

